

Smart Locker Instruction Manual

ADD:Pangcun,Luolong area,Luoyang city,Henan province,China

TEL: +8616638902272

E-mail:qian@u-furnitures.com

qian@like-furniture.com

Web:www.unicorn-furnitures.com

Part 1

Operational instructions



1) Barcode locker' s access steps:

Depositing steps: Press "IN" key, take your barcode receipt, close the door after put in your goods.

Collect steps: Put the barcode slip into the scanning area. After the system reads the barcode data, the door can be opened. Please pick up all goods and close the door.

2) Smart fingerprint locker' s access steps:

Depositing steps: Press "IN" key, Put your finger on the fingerprint reader, the door can be opened after fingerprint entry, put in your goods, and close the door.

Collect steps: Put the finger that has been recorded on the fingerprint reader, after the fingerprint is matched, the door can be opened. Please take all goods and close the door.

3) Intelligent Card Locker' s access steps:

Depositing steps: Press "IN" key, put the IC or ID card in card reading area. After the system reads the data, the door can be opened, put in your goods and close the door.

Collect steps: Put the IC or ID card in card reading area. After the system reads the data, the door can be opened, take out your goods and close the door.

4) Smart self-set passwords locker' s access steps:

Depositing steps: Press "IN" key and enter a six-digit password (the six-digit password should not be the same). After pressing "OK" key, the door can be opened, put in your goods and close the door.

Collect steps: Press "OUT" key, enter the door number and your password. The door can be opened, take out your goods and close the door.

Part 2

System Management Function



As shown in the figure : Click 【↑】 first and then click 【OK】, enter the administrator password(The original password is 888888). Then click 【OK】 to enter management interface.


Home Page

1) **Open:** Enter the door number to open the door (only one specified door can be opened).

- 2) **Open All:** Enter the start and end door numbers, the doors are opened in order.
- 3) **Remove:** Enter the door number, the door will be opened and the data can be cleared, the box will be empty.
- 4) **Remove All:** Enter the start and end door numbers, the doors are opened in order and the data is cleared, all boxes are empty.
- 5) **Lock:** Enter the specified door number. The door is locked and will not be opened.
- 6) **Lock All:** Enter the start and end door numbers, the doors are locked in order and will not be opened.
- 7) **Unlock:** Enter the locked door number, the door can be opened.
- 8) **Unlock All:** Enter the start and end locked door numbers, the doors will be unlocked.
- 9) **Time:** Used to set the current date and time.
- 10) **Parameters :** Press “ ↓ ” , Enter the second page of the management interface, the content is as follows.
 - ① **Modify Password:** Change the administrator password (The original password is 888888).
 - ② **Charge Settings:** Set the coin insertion quantity.
 - ③ **Voice Switch:** Set to turn on or turn off voice.
 - ④ **Long-term User:** Set the long term user which has own locker or lockers.
 - ⑤ **Factory data reset.**
 - ⑥ **Usage Record:** Enter the specified door to query the use of this door record.
 - ⑦ **Charge records:** Enquiry of charge record.

Part 3

 Reset The Factory Password Operation Instructions

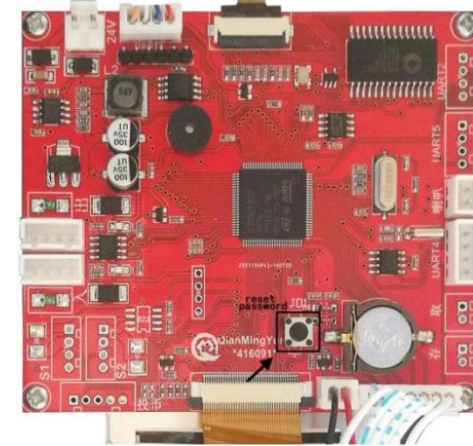


There is a recovery password button behind the screen. Long press the button to turn off the power and turn on the power after three seconds. When the buzzer rings for three times, the Super Admin password is restored successfully.

Part 4

Matters Needing Attention:

- 1) The barcode system shall clean up the scrap of paper in the printer regularly.
- 2) Always keep the fingerprint mirror clean.
- 3) Users are advised to keep their hands dry when using.
- 4) The user is advised not to store inflammable and explosive articles in the cabinet.
- 5) Avoid direct sunlight, rain leakage, cool and humid, dust environment.

 
Accessories :

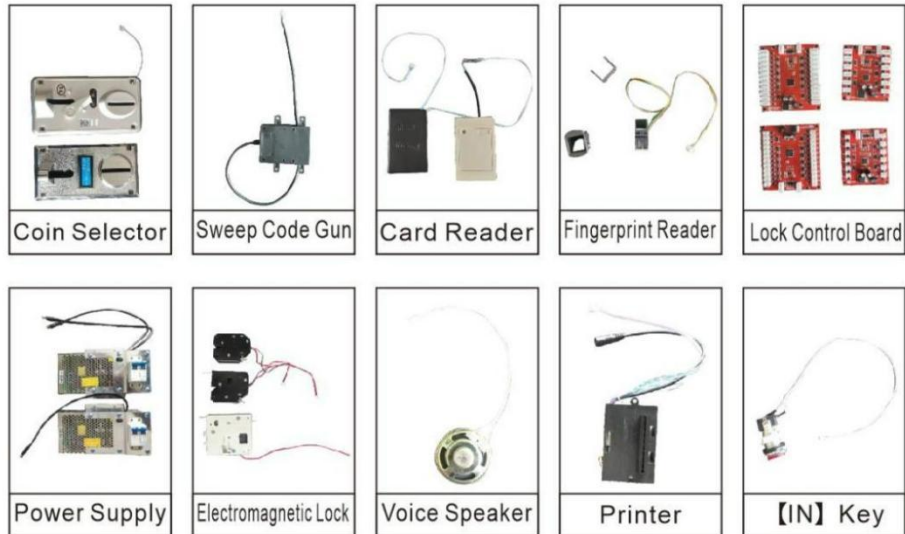

Printing:

Please use 58 mm thermosensitive paper for printing.

 Printer card opening method:

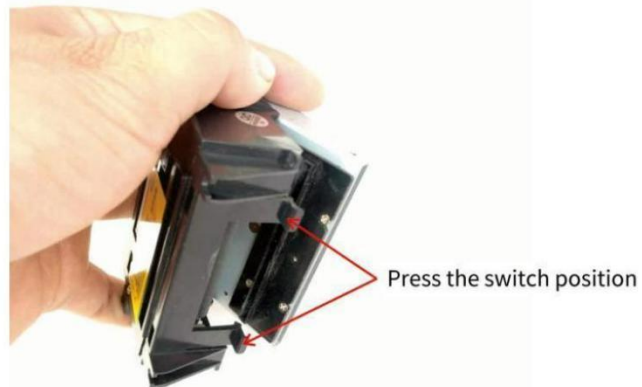

Please refer to CD or USB flash disk for installing video and managing after-sales service.